

DC125 Quick Start Guide

Lumens™

⚠ Important


* Please activate your warranty at www.lumens.com.tw/reg

* Please visit our website www.lumens.com.tw/goto.htm to download latest version of Software, Multilingual User Manual and Quick Start Guide.


1. Installation & Connection

* For product accessories, please refer to [DC125 User Manual](#).

▼ Connect to a Computer

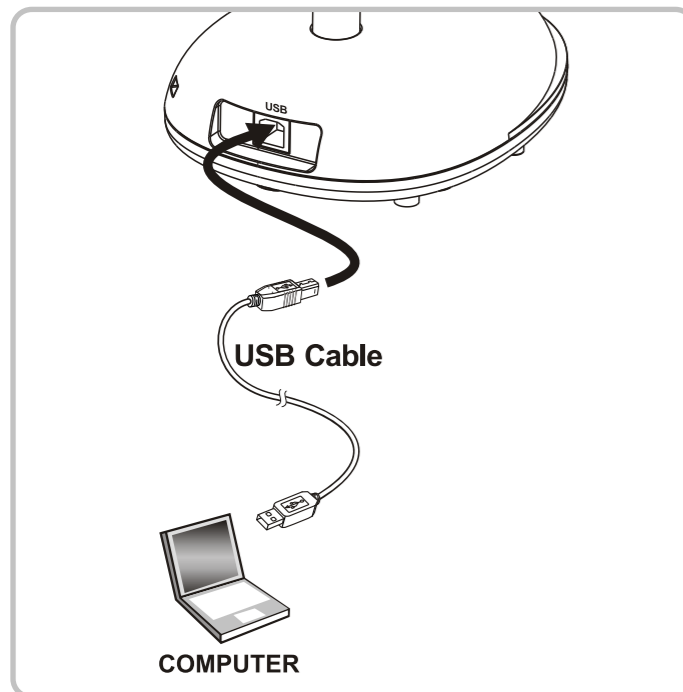




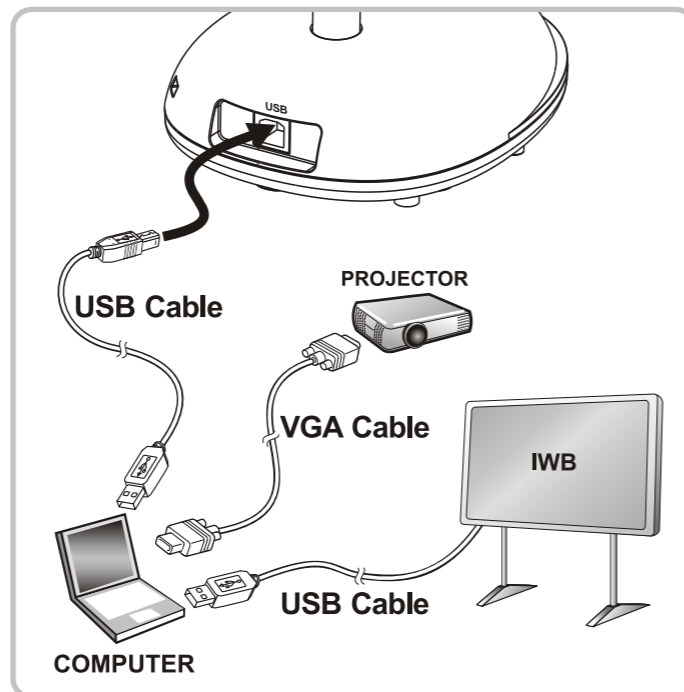

▼ Connect to an Interactive Whiteboard (IWB)

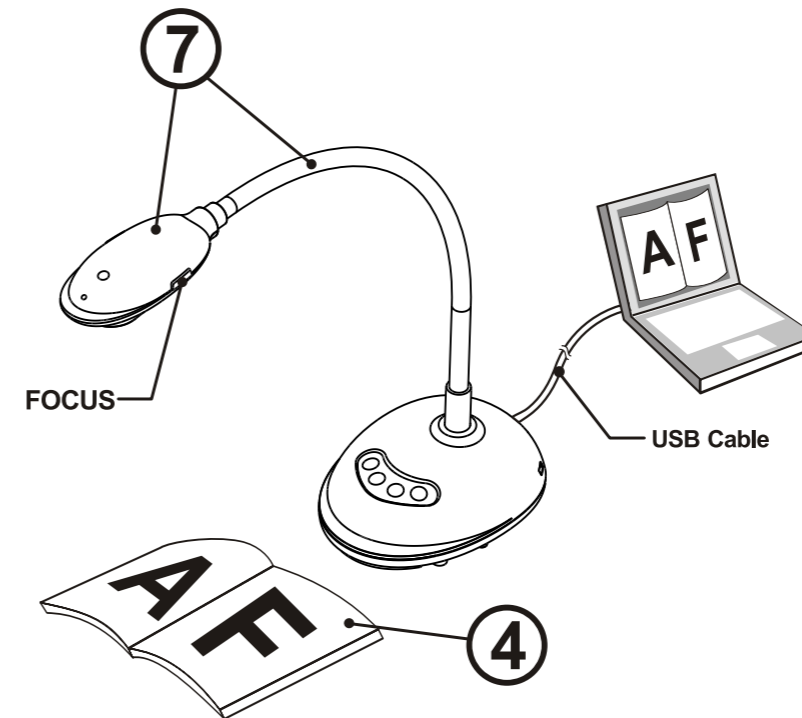

⚠ The power is on while USB is connected.

2. Getting Started



- ① Install your Ladibug™, please refer to opposite page [3. Ladibug™ Image software Installation](#).
- ② Double-click the [Ladibug]  icon to start your Ladibug™.
- ③ Mouse over the [Ladibug]  icon to select menu functions.
- ④ Place document or object to be displayed under the camera.
- ⑤ Click [PREVIEW]  to display the POWER Frequency setting page, and then follow the on-screen instructions for setting. The live video will be available after the setting is completed.
(*This setting is required only when you are using for the first time.)
- ⑥ Click [AUTO TUNE]  to optimize the image. You are ready to teach or present!
- ⑦ Reposition the gooseneck as needed and press the [FOCUS] button.

* Each time the camera head is moved, press the [FOCUS] button to refocus the lens.

* Please refer to the [DC125 user manual](#) for more operations.

3. Ladibug™ Image software Installation Instructions

▼ System Requirements


Windows XP	Windows Vista / Windows 7	MAC OS X 10.4 / 10.5 / 10.6 / 10.7
<ul style="list-style-type: none"> • Min CPU: P4 2.8 GHz • Min Memory: 512MB • Direct X 9 Compatible • Min Resolution: 1024x768 • 100MB Min Disc Space • Windows XP SP2 and above 	<ul style="list-style-type: none"> • Min CPU: P4 2.8 GHz • Min Memory: 1GB (32-bits) /2GB(64-bits) • Direct X 9 Compatible • Min Resolution: 1024x768 • 100MB Min Disc Space 	<ul style="list-style-type: none"> • Min CPU: PowerPC G4 866MHz or Intel Pentium® 1.83GHz Intel Core 2 Duo • Min Memory: 512MB • Min resolution 1024x768 • 24-bit color display monitor • 1GB Min Disc Space • Min QuickTime 7.4.5

⚠ Very Important


* To ensure successful installation, please make sure each of the following steps is completed.

➔ Windows XP / Vista / 7


1. Please download the Ladibug™ software after connected to the Lumens™ web site.
2. Click the [Setup] file after decompressing the downloaded file.
3. Please read instructions, then press [Next].

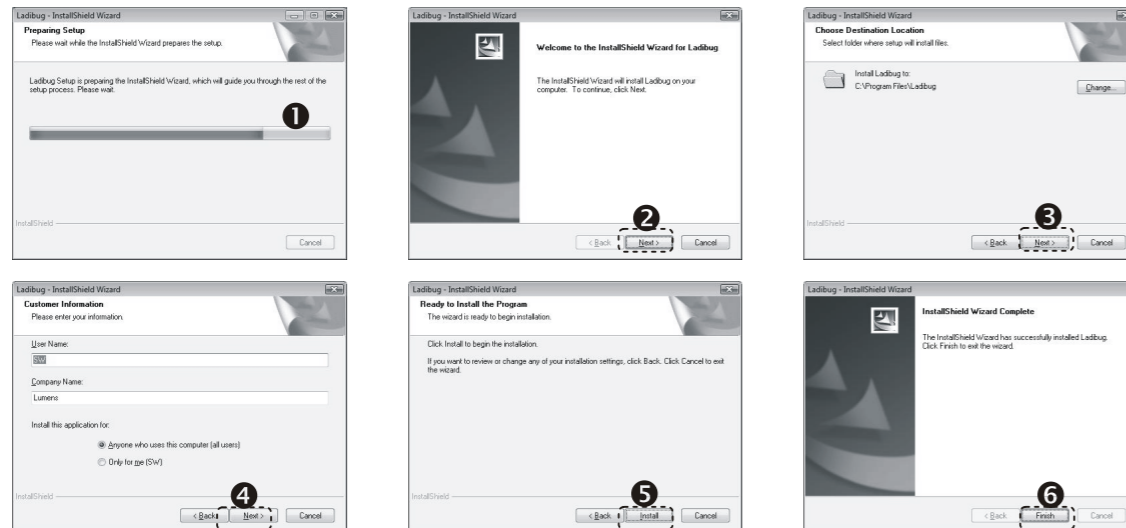

4. Press [Yes] to create a Ladibug™ shortcut on your desktop.

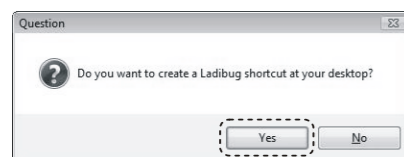


5. Please click the [Finish] button then reboot the system.

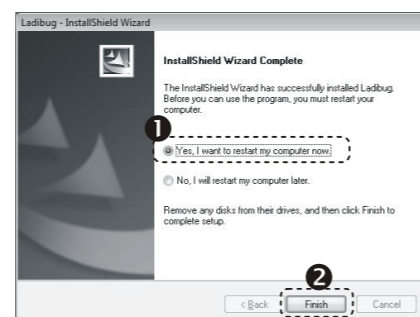


➔ MAC


1. Please download the Ladibug™ software after connected to the Lumens™ web site.
2. Click the Ladibug™ icons for installation after decompressing the downloaded file.
3. Run the installation process by following the onscreen instructions.

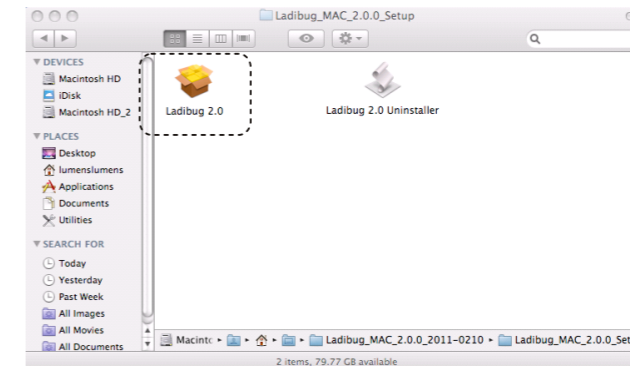


4. Please follow the instructions and press [Continue].

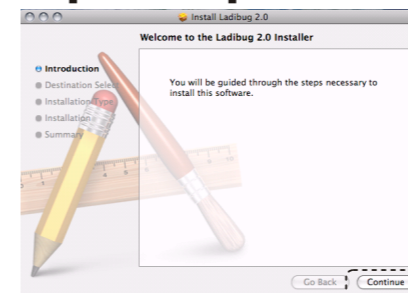


7. Click [Continue Installation].

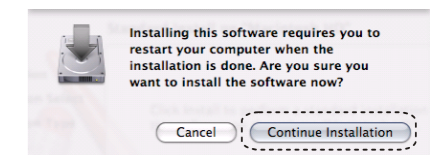

5. Click [Install].

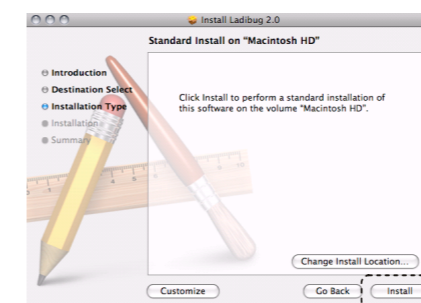

8. Click [Restart] to finish installing the software.

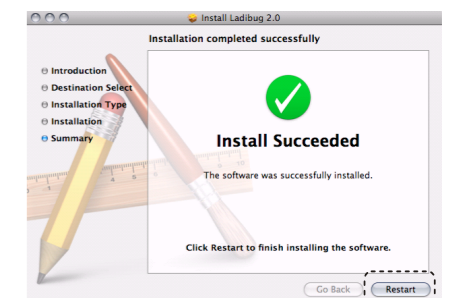

6. Enter your username and password, then click [OK].

